


Liquid Compound

The kit is composed by Bi-syringe containing the two resin components, separated and already dosed for the mixing, which occurs when the components pass inside the Mixer. The kit is offered in various arrangements in order to satisfy the different needs of the final users.

KEEP ALWAYS VERTICAL

01 Bi-syringe can be reused, keep the cap.

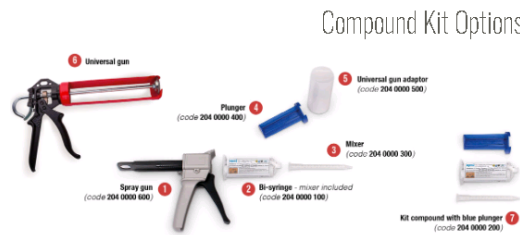

03A Spray gun for compound kit replacement: the most comfortable solution. Fit everything inside the spray gun for compound.

03B Kit compound 50 ml with blue Plunger: the most economical solution, recommended for the mixing of a limited number of cable glands, since it is completely manual.

03C Adaptor for universal gun: can be used with an ordinary silicone spray gun, not supplied. Insert the syringe into the adaptor, apply the mixer and the blue plunger as described previously and fit




04 Always in a vertical position, fill the first ten mm of resin in order to prevent the liquid from hardening, coming from the mixer before coming into contact with the resin



05 The cable gland must be previously tightened



06 Turn over the nozzle to insert the resin inside the cable gland. Hold in position for at least 24 h.

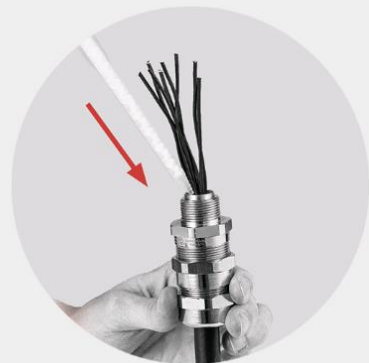

APPLICATION ON B SERIES

Application	By hand
Mixing time	30 min
Gel time	-
Full cure time	4 hours
Installation	Any Orientation

N. CABLE GLANDS SEALED WITH 1 KIT COMPOUND

(APPROXIMATE VALUES ONLY)

SIZE	ØC mm	N. CABLE GLANDS
16	4	30
	7	60
20	5,5	15
	8	20
	10,5	30
25	8	8
	10,5	10
	13	14
	15,5	25

SIZE	ØC mm	N. CABLE GLANDS
32	13	5
	15	6
	18	8
	21	14
40	21	4
	24	5
	27	9
50	24	2
	27	3
	30	4
	33	7

SIZE	ØC mm	N. CABLE GLANDS
63	36	2
	39	2
	42	4
75	45	1
	48	1
	51	2
90a	54	1
	58	2
90b	54	0,5
	64	2